



INV-Lite*

1. Cantilever Clamp
2. Cam-Lever
3. Bar
4. InVision Boss
5. Cable Clip
6. Star Knob
7. Rods within TPE sleeve
8. Lyres® (62-Shore)

*InVision Lite not included

Upgrade Pack

- 9 & 11. Front & rear sleeve sections (these are identical)
10. Middle sleeve section

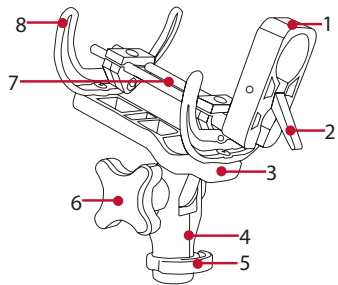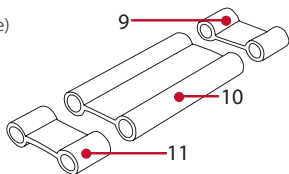

Trusted by Professionals

Rycote Microphone Windshields Ltd

Libby's Drive, Slad Road, Stroud, Glos, GL5 1RN, U.K.

Email: tech_support@rycote.com

Web: rycote.com

Tel: +44 (0) 1453 759338

10/2017

INV-Lite

Upgrade Pack



Fitting Guide
InVision® Boom Shock Mount

Fitting Guide

INV-Lite Upgrade Pack


Thank you for choosing the INV-Lite Upgrade Pack! The following Quick Start Guide provides you with the basics on fitting this product to the INV-Lite shock-mount.

Overview

Elegant. Ergonomic. Balanced.

The INV-Lite Upgrade Pack is made up of three separate sections of thermoplastic elastomer (TPE). These slip over the metal rods on the INV-Lite shock mount, forming an unobtrusive sleeve which provides enhanced protection from the effects of rapid air-flow over the INV-Lite (e.g. when booming quickly).

1 Fitting Upgrade Kit

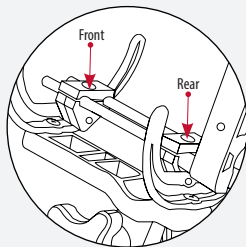


1 Using a 2.0mm Hex screwdriver, loosen the screws on the top of the front and rear rod grips, as shown;


NB: Do not undo screws completely, just loosen.

2 Grip the Cantilever Clamp section of the INV-Lite and slowly pull backward to release the clamp and the two metal rods;

3 Slip one of the 2 small sections of the Upgrade Pack onto the rods, sliding it all the way until it is touching the Cantilever Clamp section;

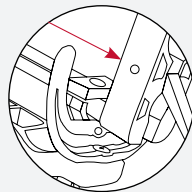

4 Re-insert the rods into the rear rod grip and push forward, until enough of the rods are through the rear grip to slip-on the longer, middle section of the Upgrade Pack;

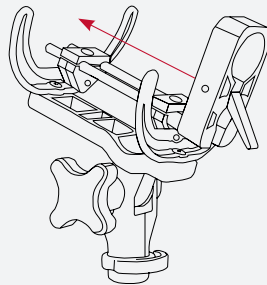

5 After slipping-on the middle section of the Upgrade Pack, insert the rods back through the front rod grip;

6 Slip on the remaining small section of the Upgrade Pack onto the rods, in front of the front rod grip.

7 Re-tighten the two screws on the top of the rod grips (front and rear) securely.